

**Wi-Fi Module and
SolarPower App
User's Manual**

Version: 1.0

Table of Contents

| | | |
|----|--|---|
| 1. | Introduction | 1 |
| 2. | Unpack and Overview | 1 |
| | 2.1 Packing list | 1 |
| | 2.2 Product overview | 2 |
| 3. | Wi-Fi Module Installation | 2 |
| 4. | SolarPower App Installation | 2 |
| | 4-1. Download and install APP | 2 |
| | 4-2. Initial Setup | 3 |
| | 4-3. Login and APP Main Function | 6 |
| 5. | SolarPower APP Operation..... | 7 |
| | 5-1. Overview..... | 7 |
| | 5-2. Devices..... | 7 |
| | 5-3. ME..... | 8 |
| | 5-4. Device List..... | 8 |
| | 5-5. Monitoring Information and Parameter Setting..... | 9 |

1. Introduction

Wi-Fi module can enable wireless communication between hybrid inverters and monitoring platform. Simply put this module connected to an inverter with communication cable and install APP from Google Play or Apple stores, it can not only monitor the inverters' operation status, but also set up parameters of the inverters through your mobile phone.

The major functions of this APP:

- Delivers device status during normal operation.
- Allows to configure device setting after installation.
- Notifies users when a warning or alarm occurs.
- Allows users to query inverter history data.



2. Unpack and Overview


2.1 Packing list

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- Wi-Fi Module x 1
- User's Manual x 1



2.2 Product overview

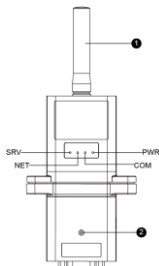


1. Antenna
2. Inverter connection status LED
OFF: Inverter does not power to Wi-Fi module.
ON: Inverter powered to Wi-Fi module successfully.
3. PWR: To indicate if the power is on.
COM: To indicate if communication between Wi-Fi module and Inverter is normal.
NET: To indicate if Wi-Fi module is connected to router.
SRV: To indicate if Wi-Fi module is connected to the internet.

3. Wi-Fi Module Installation

Please follow below steps to install Wi-Fi module:

Step 1: The module contains four strong magnetics backing and can be easily be placed on the side of the inverter.

Step 2: Please use one RJ45 to RS-232 communication cable to connect an inverter and Wi-Fi module as below chart.

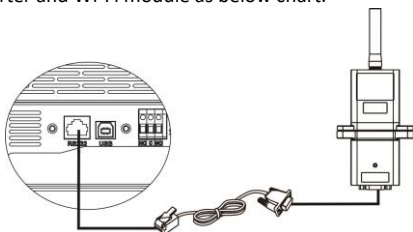

4. SolarPower App Installation

4-1. Download and install APP

Operating system requirement for your smart phone:



iOS system supports iOS 9.0 and above



Android system supports Android 5.0 and above

Please scan the following QR code with your smart phone and download SolarPower App.



Android system




iOS system


Or you may find “SolarPower Wi-Fi” app from the Apple® Store or “SolarPower” in Google® Play Store.




4-2. Initial Setup


Step 1: Registration at first time

After the installation, please tap the shortcut icon  to access the APP on your mobile screen. In the screen, tap “Register” to access “User Registration” page. Fill out all required information accordingly. You can

scan the Wi-Fi Module PN by tapping icon . Tap “Register” after you have completed the registration.

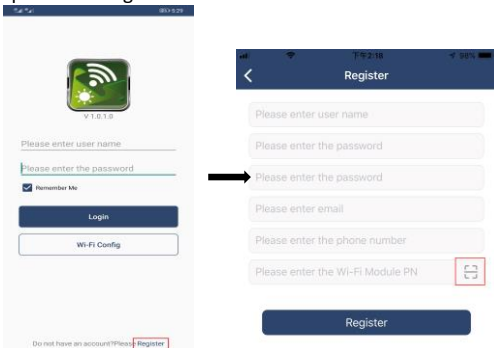


Then, a “Registration success” window will pop up. Tap “Go now” to continue setting local Wi-Fi network connection.

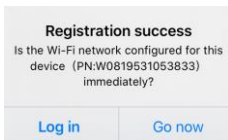


Step 2: Local Wi-Fi Network Configuration

Now, you are in “Wi-Fi Config” page. There are detailed setup procedure listed in “How to connect?” section and you may follow it to connect Wi-Fi.

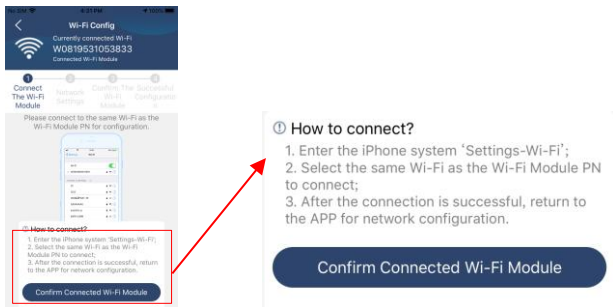


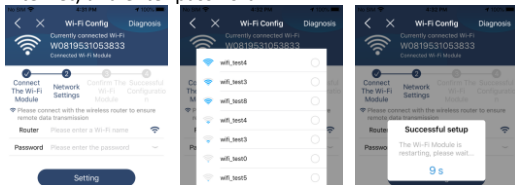
Enter the “Settings→Wi-Fi” and select connected Wi-Fi name. The connected Wi-Fi name is the same to your Wi-Fi PN number and enter default password “12345678”.

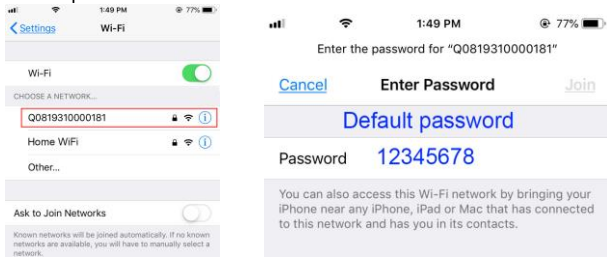


Then, return to SolarPower APP and tap “ [Confirm Connected Wi-Fi Module](#) ” button when Wi-Fi Model is connected successfully.

Step 3: Wi-Fi Network settings


Tap  icon to select your local Wi-Fi router name (to access the internet) and enter password.



Step 4: Tap “Confirm” to complete the Wi-Fi configuration between the Wi-Fi Module and the Internet.

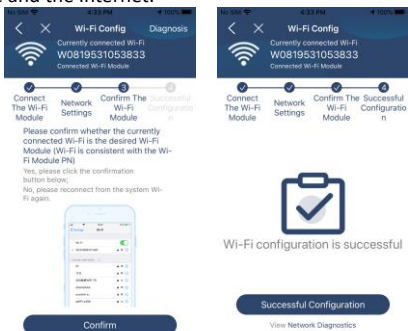

If the connection fails, please repeat Step 2 and 3.

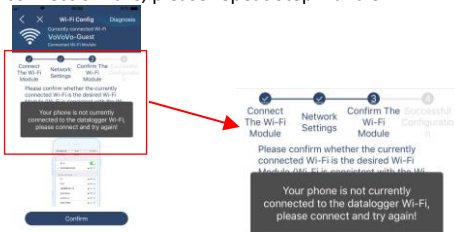

Step 5: Diagnose Function

If the module is not monitoring properly, please tap “Diagnosis” on the top right corner of the screen for further details. It will show repair suggestion. Please follow it to fix the problem. Then, repeat the steps in the chapter 4.2 to re-set network setting. After all setting, tap “Rediagnosis” to re-connect again.



Repair suggestion

Rediagnosis

The Inverter and the datalogger communicate abnormally.

- Please check if the Inverter and the datalogger are powered on normally.
- Please check if the Inverter address is between 1 and 5.
- Please check if the connection between the Inverter and the collector is abnormal, such as poor contact caused by oxidation or looseness of the interface, reverse connection of the 485 interface AB line, and data line damage.
- Try restarting the Inverter and datalogger to see if the anomaly is eliminated.

Datalogger and router communication abnormalities

- Please confirm that the wireless routing network setting has been made.
- Make sure that the datalogger is set up to connect to AP hotspots sent by hardware devices such as wireless routers instead of virtual AP hotspots.



Repair suggestion


Rediagnosis

The diagnosis is successful!

4-3. Login and APP Main Function

After finishing the registration and local Wi-Fi configuration, enter registered name and password to login.


Note: Tick “Remember Me” for your login convenience afterwards.

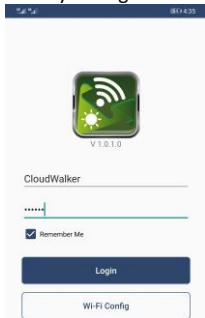

5. SolarPower APP Operation


5-1. Overview


After login is successfully, you can access “Overview” page to have overview of your monitoring devices, including operation status (normal, offline, alarm, and fault) as below diagram.

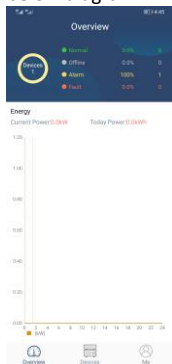


5-2. Devices




Tap the icon , you can enter Device List page. You can review all of the devices in “Device List”. You also can add or delete Wi-Fi Module in this page.

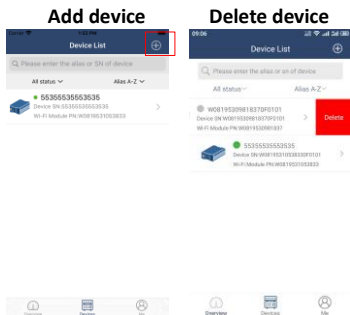


Tap  icon on the top right corner and enter part number by scanning bar code to add Wi-Fi module. This part number is printed on the Wi-Fi

module's surface, or manually enter it. Tap "Confirm" to add Wi-Fi module in the Device list. Time zone and Wi-Fi module PN are required information. Tap "Confirm" to complete and the added Wi-Fi module can be reviewed in the Device list.

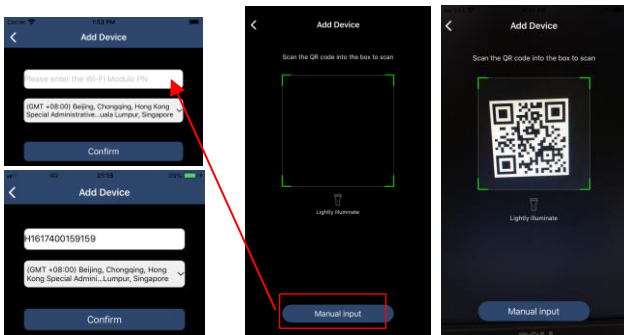

5-3. ME


In ME page, users can modify "My information", including **【User's Photo】**, **【Account security】**, **【About】**, **【Clear cache】** and **【Log-out】**, shown as below diagrams.

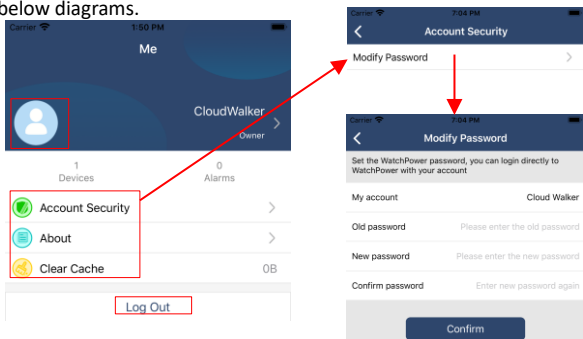

5-4. Device List

In Device List page, you can pull down to refresh the device information and then tap any device you want to check up for its real-time status and related information as well as to change parameter settings. Please refer to

the parameter setting list.

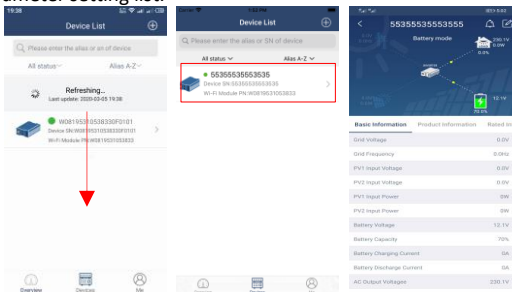

5-5. Monitoring Information and Parameter Setting

Device Mode

On the top of screen, there is a dynamic power flow chart to show live operation. It contains five icons to present PV power, inverter, load, utility and battery. Based on your inverter status, there will be **【Standby Mode】**, **【Line Mode】** and **【Battery Mode】**.

【Standby Mode】 Inverter will not power the load until “ON” switch is pressed. Qualified utility or PV power can charge battery in standby mode.




【Line Mode】 Inverter will power the load from the utility with or without PV power. Qualified utility or PV power can charge battery.




【Battery Mode】 Inverter will power the load from the battery with or without PV power. Only PV power can charge battery at this mode.



Device Alarm and Name Modification


In this page, tap the  icon on the top right corner to enter the device alarm page. Then, you can review alarm history and detailed information.

After tapping the  icon on the top right corner, a blank input column will pop up. Then, you can edit the name for your device and tap “Confirm” to complete name modification.

| Basic Information | Product Information | Rated Info |
|---------------------------|---------------------|------------|
| Grid Voltage | | 0.0V |
| Grid Frequency | | 0.0Hz |
| PV1 Input Voltage | | 0.0V |
| PV2 Input Voltage | | 0.0V |
| PV1 Input Power | | 0W |
| PV2 Input Power | | 0W |
| Battery Voltage | | 12.1V |
| Battery Capacity | | 70% |
| Battery Charging Current | | 0A |
| Battery Discharge Current | | 0A |
| AC Output Voltages | | 230.1V |

Device Information Data

Users can check up **【 Basic Information 】**, **【 Product Information 】**, **【 Rated information 】**, **【 History 】** and **【 Wi-Fi Module Information 】** by swiping left.

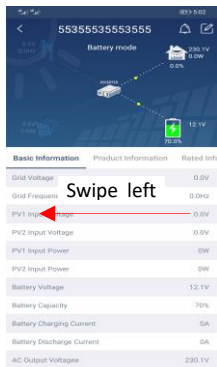

【Basic Information】 displays basic information of the inverter, including AC voltage, AC frequency, PV input voltage, Battery voltage, Battery capacity, Charging current, Discharging current, Output voltage, Output frequency, Output apparent power, Output active power and Load percent. Please slide up to see more basic information.

【Production Information】 displays Model type (Inverter type), Main CPU version, Bluetooth CPU version and secondary CPU version.

【Rated Information】 displays information of Nominal AC voltage, Nominal AC current, Rated battery voltage, Nominal output voltage, Nominal output frequency, Nominal output current, Nominal output apparent power and Nominal output active power. Please slide up to see more rated information.

【History】 displays the records of unit information and setting.

【Wi-Fi Module Information】 displays of Wi-Fi Module PN, status and firmware version.

Parameter Setting

This page is to activate some features and set up parameters for inverters. Please be noted that the listing in “Parameter Setting” page in below diagram may differ from the models of monitored inverters. Here is briefly illustrate partial setting: **【Output Setting】**, **【Battery Parameter Setting】**, **【Enable/ Disable items】**, **【Others Settings】**, **【Restore to the defaults】** Please refer to product manual when necessary.



There are three ways to modify setting and they vary according to each parameter.

- Listing options to change values by tapping one of it.
- Activate/Shut down functions by clicking “Enable” or “Disable” button.
- Changing values by clicking arrows or entering the numbers directly in the column.

Each function setting is saved by clicking “Set” button.

Please refer to below parameter setting list for an overall description and be noted that the available parameters may vary depending on different models. Please always see the original product manual for detailed setting instructions.

Parameter setting list:

| Item | | Description |
|----------------|----------------------------|----------------------------------|
| Output Setting | Output Source Priority | Output source priority selection |
| | Input Voltage Range | Input voltage range selection |
| | AC Output Rating Voltage | To set output rating voltage |
| | AC Output Rating Frequency | To set output rating frequency |

| Item | | Description |
|----------------------------|--------------------------------------|---|
| Battery Parameters Setting | Battery Type | Select connected battery type |
| | Battery Cut-off Voltage | Set battery cut-off voltage |
| | Bulk Charging Voltage | Set battery bulk charging voltage |
| | Battery Float Voltage | Set battery floating charging voltage |
| | Max Charging Current | To configure total charging current for solar and utility chargers. |
| | Max AC Charging Current | Set maximum utility charging current |
| | Charging Source Priority | To configure charger source priority |
| | Back To Grid Voltage | Set battery voltage to stop discharging when grid is available |
| | Back To Discharge Voltage | Set battery voltage to stop charging when grid is available |
| Enable/Disable Items | Overload Auto Restart | If disabled, the unit won't be restarted after overload occurs. |
| | Overload Temperature Auto Restart | If disabled, the unit won't be restarted after over-temperature fault is solved. |
| | Overload Bypass | If enabled, the unit will enter bypass mode when overload occurs. |
| | Beeps While Primary Source Interrupt | If enabled, buzzer will alarm when primary source is abnormal. |
| | Buzzer | If disabled, buzzer won't be on when alarm/fault occurred. |
| | Backlight | If disabled, LCD backlight will be off when panel button is not operated for 1 minute. |
| | LCD Screen Return To Default Display | If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute. |
| | Fault Code Record | If enabled, fault code will be recorded in the inverter when any fault happens. |

| Item | Description | |
|-------------------------|--|--|
| Others Settings | Solar Supply Priority | Set solar power as priority to charge the battery or to power the load. |
| | Reset PV Energy Storage | If clicked, PV energy storage data will be reset. |
| | Start Time For Enable AC Charge Working | The setting range of start charging time for AC charger is from 00:00 to 23:00. The increment of each click is 1 hour. |
| | Ending Time For Enable AC Charge Working | The setting range of stop charging time for AC charger is from 00:00 to 23:00. The increment of each click is 1 hour. |
| | Scheduled Time For AC Output On | The setting range of scheduled time for AC output on is from 00:00 to 23:00. The increment of each click is 1 hour. |
| | Scheduled Time For AC Output Off | The setting range of scheduled time for AC output off is from 00:00 to 23:00. The increment of each click is 1 hour. |
| | Country Customized Regulations | Select inverter installed area to meet local regulation. |
| | Set Date Time | Set date time. |
| Restore to the defaults | This function is to restore all settings back to default settings. | |